
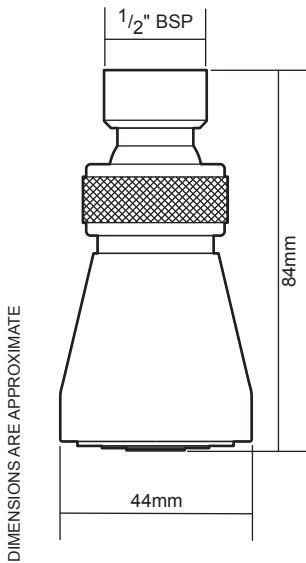


HOLLY
TAMPER PROOF
fixed shower head
(single position)

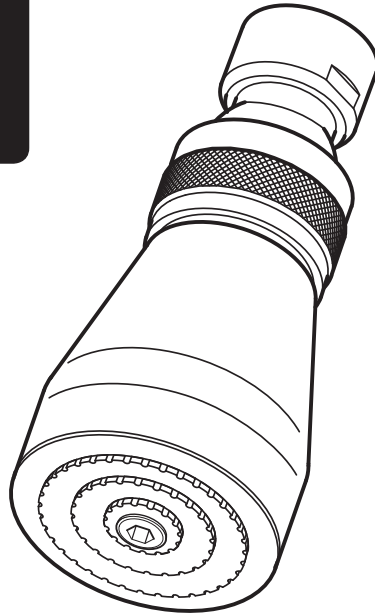

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

TAMPER PROOF fixed shower head

INSTALLATION

Before installing the *shower head flush the pipework through to remove any debris that may be in the system.

Insert the rubber *O ring into the threaded fitting of the shower head.

Offer the shower head up to the outlet pipework and tighten (**fig.1**).


Caution: It is not advised to use pipe grips as the finish on the fittings may be damaged.

OPERATION

The fixed shower head has a fixed spray pattern, so once installed no alteration is required.

Cleaning

Clean the shower head with a suitable brush and warm soapy water. Make sure all traces of scale are removed and thoroughly rinse in clean water afterwards.

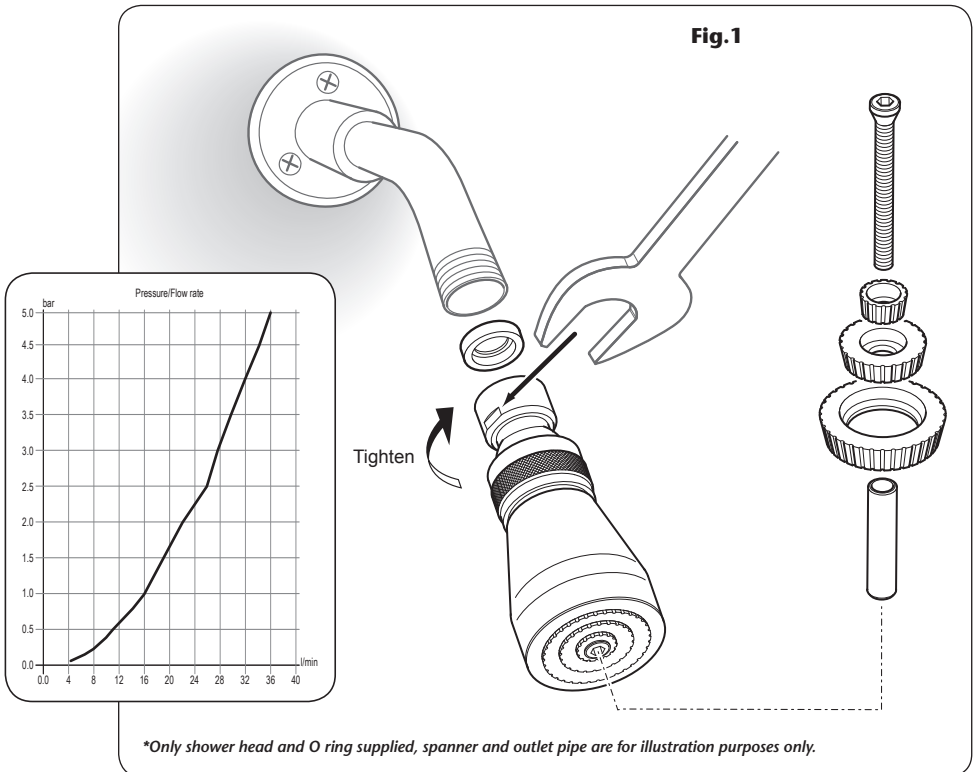

SPARES

Ref. Description

Part No.

— Complete assembly only

8860009

Please refer to shower installation and operating instructions for service details. E&OA.